

# The manual of the device “SEL ULTRA SPEAKER”



1. Mount the device in the ceiling, preferably above a conference table or desk.

Note that the effectiveness of the device is influenced by the location of the jammer and the strength of the protected person's voice – weaker and quieter voice = better effectiveness.

2. The device turns on when the power supply plug is inserted into the device and the power supply is connected to the mains.

At the same time when power is applied to the device, the device turns on and jamming starts immediately.

Once jamming is on, it can be turned off/on by pressing the green button on the RC.

- ON jamming is indicated by a single blink of the green LED hidden behind the "speaker" grid.
- OFF jamming - a double blink of the green LED.

## Safety conditions:

- do not open the device, breaking the seals involves immediate loss of warranty.
- no animals should be in the room during the operation of the device.

## Features:

- remote switching on the radio - switching off/on with the remote control
- quiet operation - no audible and annoying sounds
- simple operation.

## Specifications:

A system of high-quality ultrasonic transducers controlled by a microprocessor that achieves the best possible jamming efficiency and makes any recorded conversation unintelligible to playback.

- working range: depending on the recording device, assume an area of about 3m
- directionality of the device in the horizontal plane omnidirectional 120°
- control by wireless remote control - on and off, operating range of about 20 meters.
- wireless remote control: operating frequency 433.92 MHz in the ISM band
- power source: power adapter 15V/110-230V
- maximum continuous operation time 4-5 hours, break time 30 minutes.
- operating range in temperature from 0° to + 40° C ( 32-104 Fahrenheit )
- mounting hole diameter -190 mm, mounting template included
- warranty: 12 months

**DUE TO TECHNOLOGICAL LIMITATIONS, SOME RECORDER DEVICES CAN NOT BE SUPPRESSED, WHICH IS NOT A MALFUNCTION OF “SEL ULTRA SPEAKER”.**

## WARRANTY OBLIGATIONS

Warranty period - 12 months from the date of sale.

In case of failure of the device during the warranty period, the owner has the right to warranty repairs. In case of violation of seals, mechanical damage to the case or controls, the right to warranty is lost, and repairs are carried out at the expense of the owner.